

Camera Instructions for the Kodak Playsport Zx5 Video Camera

Kit Includes: Camera, Power Plug, USB Cord, Case, Manual, 16 GB SD Card, Tripod, Remote and HDMI Cable.

1. Turn on the camera




2. Check the video settings




- Scroll down to **Video Resolution**
- Click OK (the center button inside the arrows)
- Select **WVGA (iPad compatible)**

3. Record video

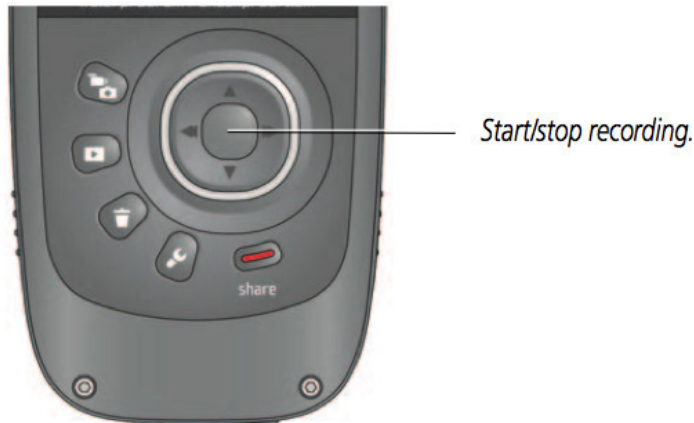


- The center button starts and stops recording
- During recording, the screen will look this:

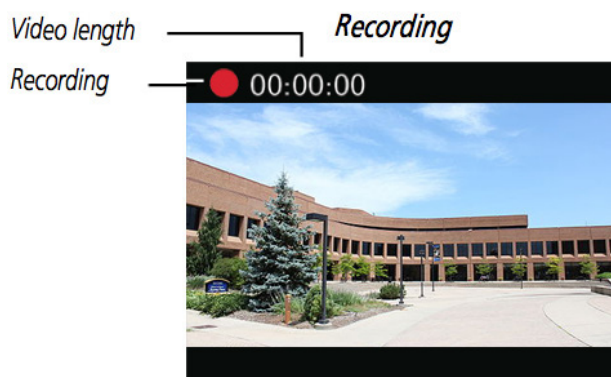


4. Review the recorded video



- 1  Review.
- 2  Previous/next video/picture.
- 3 **OK** Play/Pause.
(Press and hold to Stop.)

 Adjust video volume (or magnify a picture).

 Delete video/pictures.

5. Using the optional remote



Aim the remote at the camera's IR Receiver



Contact Brittany Ankrom for edTPA tech support at bankrom1@kent.edu

For the extended user guide, go to:
http://resources.kodak.com/support/pdf/en/manuals/urg01215/PLAYSPORT_Zx5_xUG_GLB_en.pdf